


# HanginDoorHardware.com

## Pocket Door – Dutch Door Kit

### Bottom Door

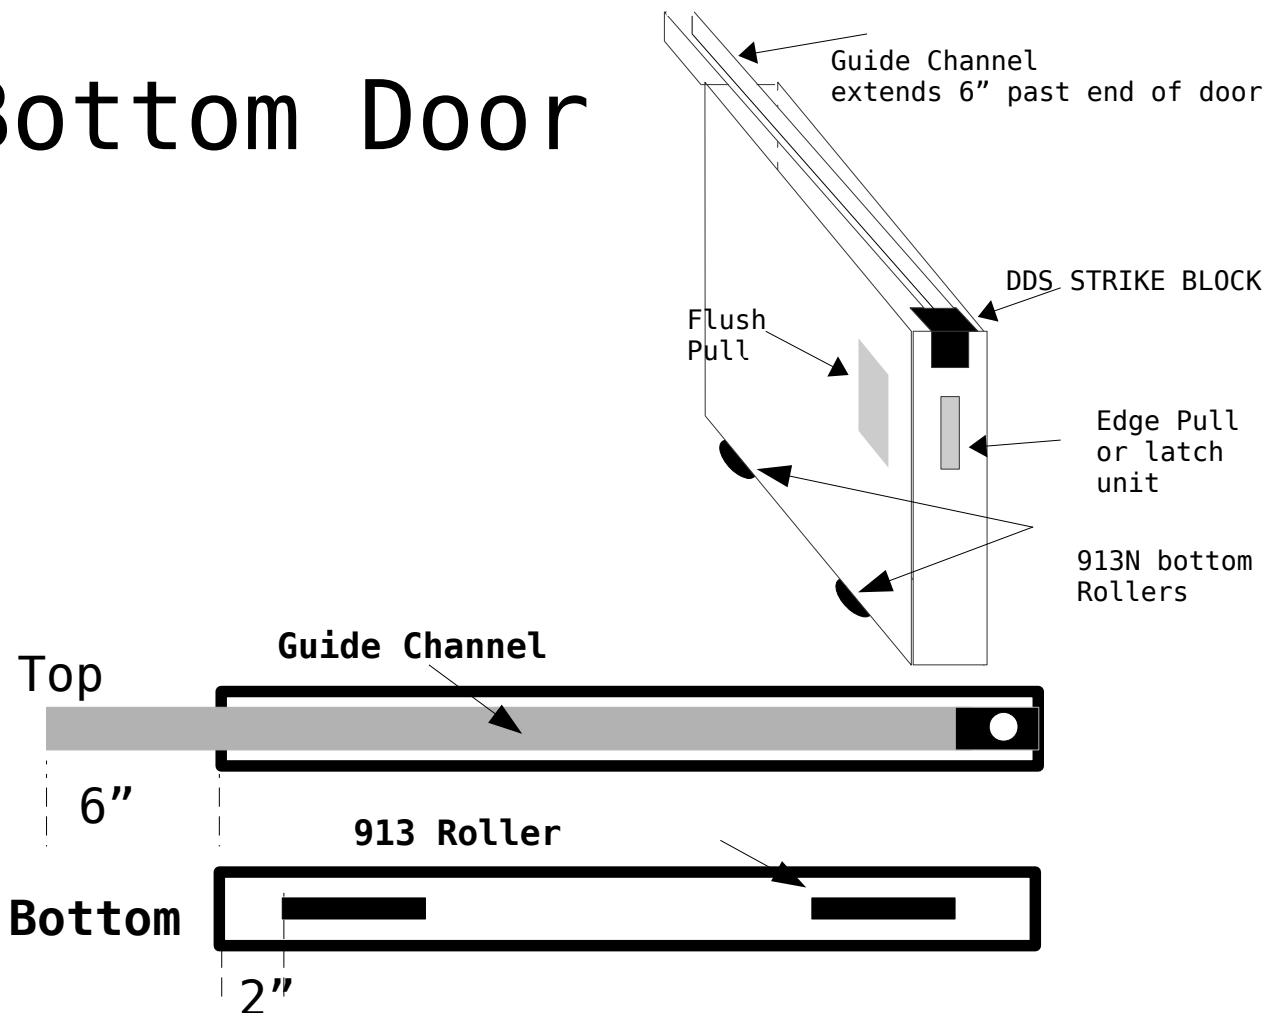

- Groove Top of bottom door for guide channel 15/16" x 7/8"
- Prep bottom of door and install bottom 913 rollers
- Prep for edge and flush pulls or latching unit and install
- Attach bottom track to floor centered at opening (see our website for information on how to prep to have the track installed later)

### Final Assembly

- Attach Guides to opening 1" from top of bottom door and bottom of top door
- Set bottom and door on track and slide into pocket
- Slide roller into track and Attached top door to top track
- attach guide channel and flush bolt strike (drill holes for mount screws)
- Adjust top rollers to set the height of top door