


# H300S-SW Series Sliding Door Hardware Installation Instructions

800-824-3018 • www.pemko.com


## Door Leaf Capacity - Up to 300 lbs.


Manufactured by

# HENDERSON

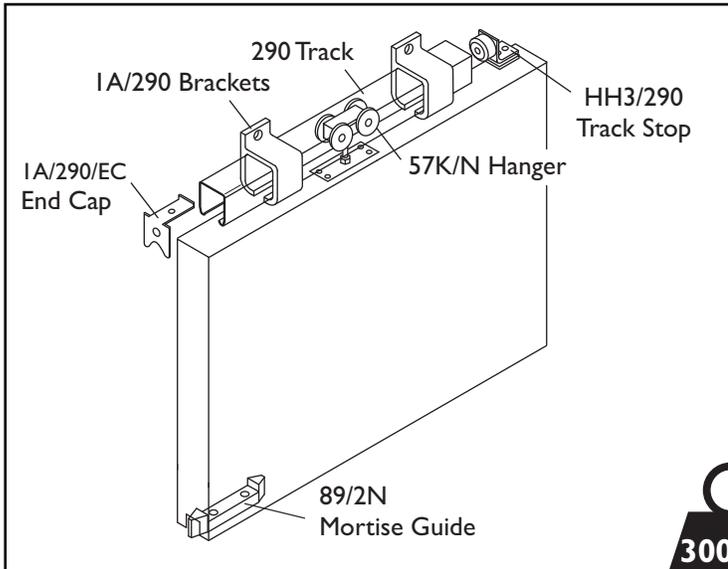

Part Number	Material	Track Length	Door Width
H300S-SW/6	Steel	72"	36"
H300S-SW/8	Steel	96"	48"
H300S-SW/10	Steel	120"	60"
H300S-SW/12	Steel	144"	72"

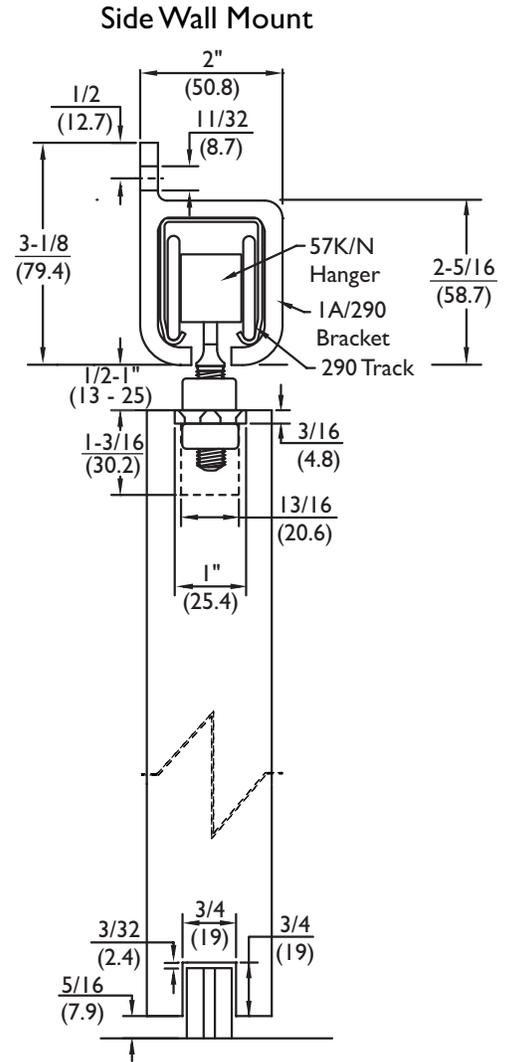

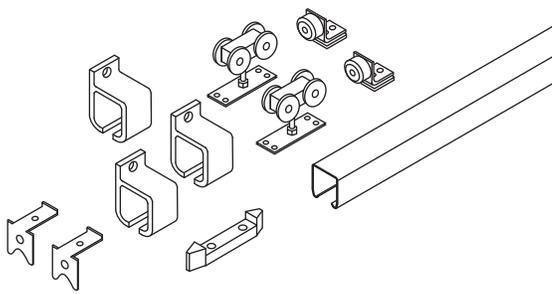

### H300S-SW Kits Include:

- 1 ea 290 Galvanized Steel Track
- IA/290 Side Wall Mount Track Brackets  
(One at each end and no more than three feet in between)
- 2 ea IA/290/EC Aluminum Alloy End Caps
- 2 ea 57K/N White Nylon Body and Wheels, Zinc Coated Steel Pendant Bolt Hangers
- 2 ea HH3/290 Galvanized Steel In-Track Stops
- 1 ea 89/2N Gray Nylon Mortise Guide


### IMPORTANT:

Visually check all bolts and screws; tighten if necessary.  
If access door is installed, check operation.  
Check operation of doors for ease.

- Door catches floor guide: Check that the track is level. Ensure that the track and floor guide are parallel to within +/- 1/8" (3).
- Door scrubs: Check that the door is level on hangers.
- Door moves while in operation: Check hangers are installed correctly.

# INSTALLATION INSTRUCTIONS


- 1** Slide brackets onto track. Inward brackets should be 2' (61m) from each end and centered on track.

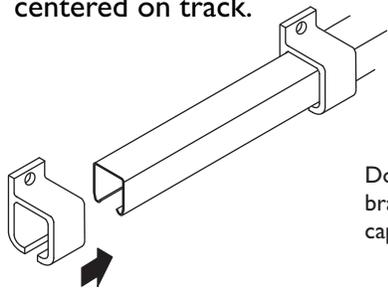

Do not install end brackets with end caps at this time.

- 2** Secure track to wall.


Fix a 1/4" thick x 3" tall x length of track shim behind the track and track brackets on a 1-3/4" thick door.

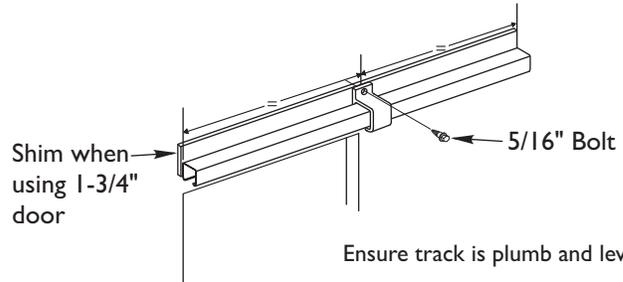


Ensure track is plumb and level.

- 3** Mortise door for door guide.

Attach a plumb line to hanger. Remove one end bracket. Place hanger inside track. Using plumb line, mark the centerline of door guide.

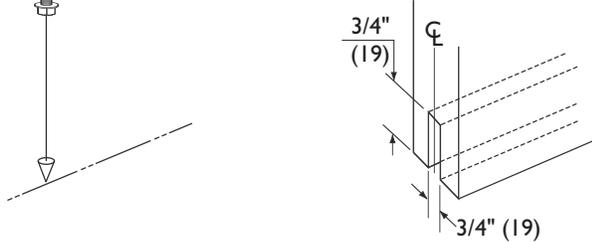


- 4** Fit door guide.

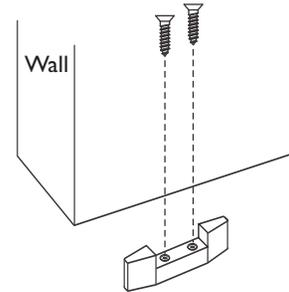


- 5** Prepare top of door for hanger hardware.

- ① Drill 13/16" (20.6) dia. x 1-3/16" (30.2) deep hole 6" (152.4) from door edge to centerline of hole and centered in thickness of door.

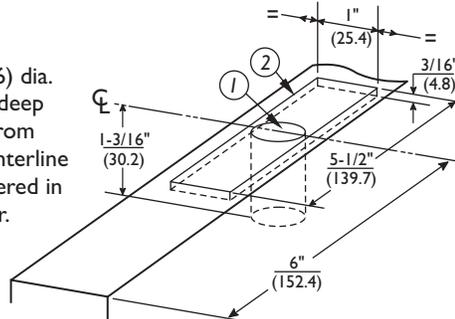


- ② Route door for 3/16" (4.8) thick, 5 1/2" (139.7) long, and 1" (25.4) wide plate centered on center line of hole and thickness of door.

- 6** Attach hangers to doors.

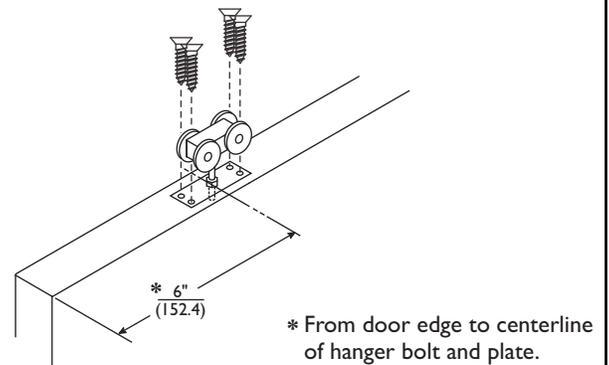

\* From door edge to centerline of hanger bolt and plate.

- 7** Slowly guide complete door unit into track using installed floor guide. Install track stops.

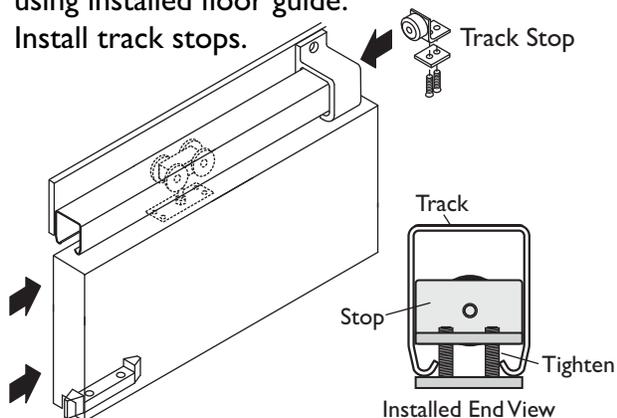

- 8** Replace end brackets onto ends of track with end caps in position. Check for smooth operation. Adjust and tighten stops.

